

Outdoor A Frame™ - AF-OUTDOOR Series

1. The unit comes with 3 crossbars. First, find the two heavy smooth crossbars. Use these as the lower crossbars. For each, use the supplied screws, place it through the lower holes in the legs, and screw into the threaded connector on the upright. Repeat for the other end of the crossbar. Repeat again for the second lower crossbar.
2. Attach the lighter / ribbed crossbar to the holes located at the top end of the legs, using the Phillips head screws provided. If the screw does not enter, you may need to collapse the front/back legs together before inserting the screw. Fully install each side of the crossbar to the leg assembly.
3. Open the stand from front to back until stays are fully extended.
4. Insert graphic into frame slots from above to complete unit assembly.

Note - Unit should be brought indoors when significant storms are expected to prevent damage to property or potential for injury. Use with outdoor media as graphic will be exposed to the elements including sun and rain.

