

Display Easel

1. Adjust telescopic leg length (fig. A).
2. Open easel (fig. B).
3. (if using top bar) Open top bar and insert carriage bolts and wingnuts (fig. C).
4. Adjust lower canvas supports (fig. D).

Applicable Products:

555, 556 (without top bar)
555TZ, 556TZ (with top bar)

