

Tablet Displays (iPad Stand™)

1. Remove acrylic cover using small tamper-proof key provided. Place tablet inside and reassemble unit (fig. A).

Note: If ball joint loosens on back, use the large tamper-proof key to retighten it securely.

Applicable Products:

IPEC

