

Scenic Fabric Wall™ - PW Series

All tube sections are numbered to identify which pieces go together, 1 with 1, 2 with 2, etc.

1. Assemble the uprights by aligning the upright sections, then allowing the rubber shock-cord to pull the sections together.
2. For the side frame bottom, connect the crossbars to the uprights using the swedged spring button at the ends. Match the sticker numbers as shown below (1 with 1, 2 with 2, etc.).
3. For the side frame top, repeat step 2 to connect the top curved section to the uprights.
4. For the center frame bottom, repeat step 2 to connect the lower crossbar sections to each other and the uprights.
5. For the center frame top, repeat step 2 to connect the upper crossbar sections to the curved sections, then connect the curved assembly to the uprights.
6. Slide the graphics over the frames. Be careful not to dirty the graphic. Close zipper at bottom.
7. For the center frame assembly, place the uprights over the front standoffs of the double stand-off base.
8. For the side frame assembly, place the uprights over the remaining standoffs of the bases.
9. Attach one z-bracket (included) between each side panel and center panel, approximately halfway up the upright, over the graphics.

