Studio Artist High Style Easel™ - 850 Series

- 1. Tilt easel forward, then insert top of support pole into bottom counterpart.
- 2. Use carriage bolts and wingnuts to attach Bottom Canvas Tray to easel brackets. Be sure to install the the knobs facing outwards.
- 3. Slide Top Canvas Holder down center pole and tighten with carriage bolt and knob.
- 4. Screw bottom levelers onto easel base and adjust as needed.
















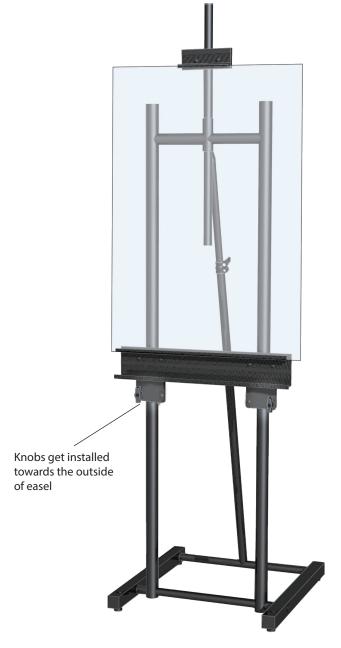

850B shown