

Traditional Easel™ - 1400

1. Rotate crossbars on back leg support so that notch is facing upwards.
2. Lay center upright face down. Attach back leg support by sliding carriage bolts into center upright channel and tightening.
3. Lay side legs face down and latch the top of the legs together as shown below.
4. Attach back leg support to side legs with wingnuts.
5. Stand up easel. Attach bottom canvas tray by sliding the knob-glide screw down side channel legs and tightening. Be sure to attach the knob-glide screws to the tray first if they are not already attached. **5-A:** It is easiest to first attach the knob to the glide screw. **5-B:** Pass the glide screw through the slot of the bottom canvas tray. **5-C:** Hold the tray in a diagonal position with the triangular edge facing upward, then insert the glide screw of the lower end into the first upright channel. **5-D:** Keep the tray in a diagonal position, then slide the glide screw of the other end of the tray, into the channel of the second upright. **5-E:** Adjust the tray to a horizontal orientation, then slide the tray to the desired height location on the uprights. Tighten the knobs.
6. **6-A:** Attach metal feet to frame holder and utility tray then, **6-B:** slide into support channel and tighten.

