


# Fixed Width Banner Towers

1. Slide banners over crossbars and "L" brackets (fig. A).
2. Screw 3" standoff onto bases using flathead screw (fig. B-1).
3. Place crossbars in between standoff and upright and screw together (fig. B-2).
4. Screw top crossbars onto uprights using round knobs (fig. C).

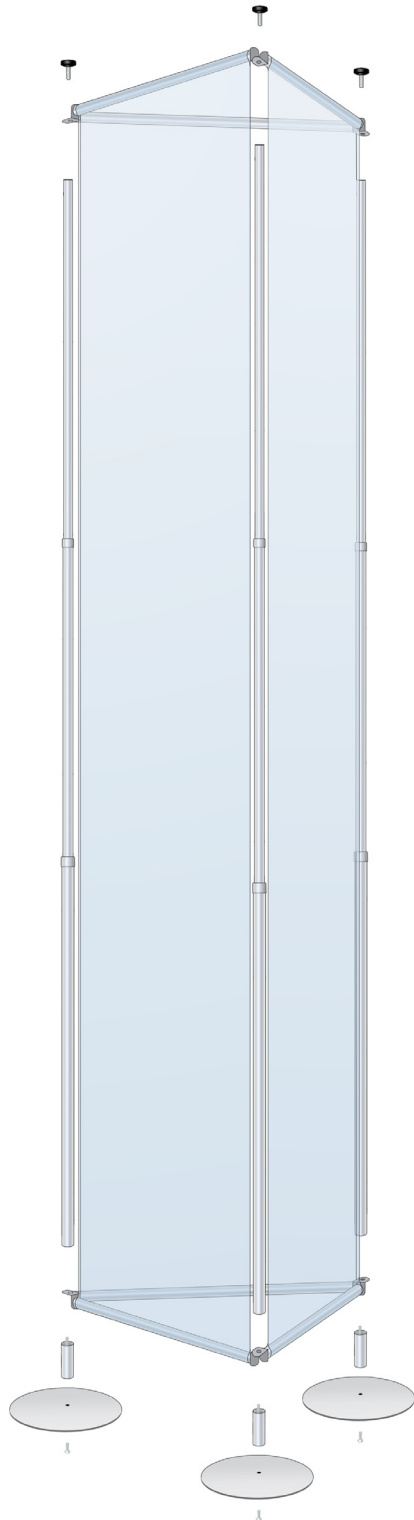

## Applicable Products:

TR1, TR2, TR3, TR4

