# Visual Merchandising (Creo)

### MAIN STRUCTURE ASSEMBLY INSTRUCTIONS

### SEE ATTACHED PAGES FOR DETAILED INSTRUCTIONS

- 1. Arrange all bases on floor, then attach all lower crossbars to base uprights by inserting button head into channel.
- 2. Slide all lower uprights over base uprights, then tighten knob of upright to secure, using top as tightening tool.
- 3. Slide uprights over lower uprights, then tighten knob of upright to secure, using top as tightening tool.
- 4. Attach all upper crossbars to upper uprights by inserting button head into channel.
- 5. Slide cone tops over upper uprights, then tighten cone top to secure.
- 6. Connect tower top to cone top using the puck screw provided.
- 7. See additional pages for accessory instructions.

NOTE: Although model shown below may differ from your model, assembly instructions remain the same.




Step 3







44

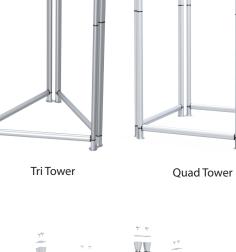



## Applicable Products:


Step 6

# Visual Merchandising (Creo)

### MAIN STRUCTURE ASSEMBLY INSTRUCTIONS

- 1. Arrange all bases on floor, then attach all lower crossbars to base uprights by inserting button head into channel.
- 2. Slide all lower uprights over base uprights, then tighten knob of upright to secure, using top as tightening tool.
- 3. Slide uprights over lower uprights, then tighten knob of upright to secure, using top as tightening tool.
- 4. Attach all upper crossbars to upper uprights by inserting button head into channel.
- 5. Slide cone tops over upper uprights, then tighten cone top to secure.
- 6. Connect tower top to cone top using the puck screw provided.
- 7. See additional pages for accessory instructions.

NOTE: Although model shown below may differ from your model, assembly instructions remain the same.

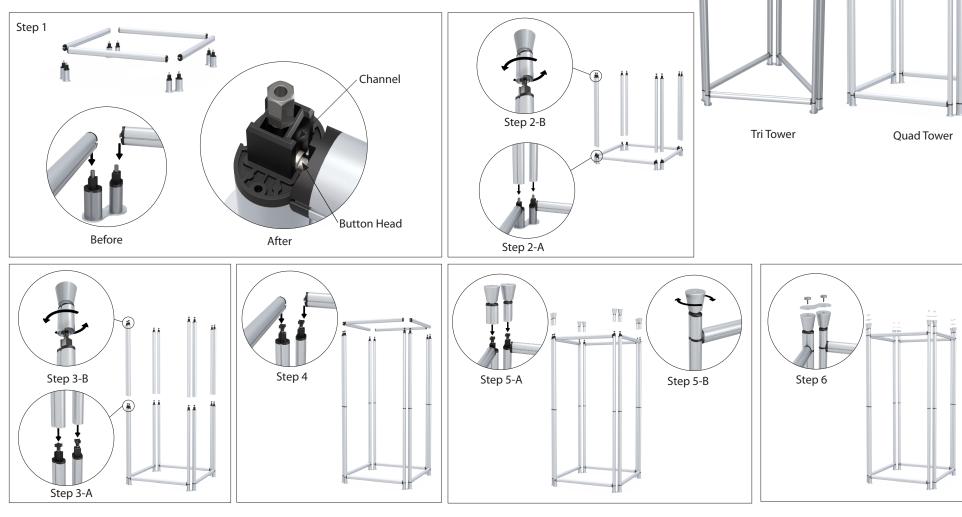

## **Applicable Products:**