
Visual Merchandising (Creo)

MAIN STRUCTURE ASSEMBLY INSTRUCTIONS

SEE ATTACHED PAGES FOR DETAILED INSTRUCTIONS

- 1. Arrange all bases on floor, then attach all lower crossbars to base uprights by inserting button head into channel.
- Slide all lower uprights over base uprights, then tighten knob of upright to secure, using top as tightening tool. 2.
- Slide uprights over lower uprights, then tighten knob of upright to secure, using top as tightening tool. 3.
- Attach crossbars and uprights for Plasma TV location. Tighten knob of upright to secure, using top as tightening tool. 4.
- 5. Attach all upper crossbars to upper uprights by inserting button head into channel.
- Slide cone tops over upper uprights, then tighten cone top to secure. 6.
- 7. See additional pages for accessory instructions.

NOTE: Although model shown below may differ from your model, assembly instructions remain the same.

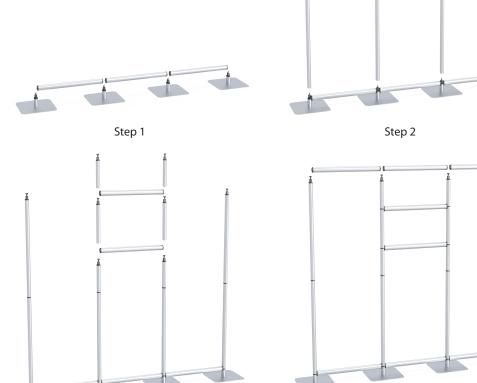





Applicable Products:





Step 4

Step 5

Step 6

Visual Merchandising (Creo)

MAIN STRUCTURE ASSEMBLY INSTRUCTIONS

- 1. Arrange all bases on floor, then attach all lower crossbars to base uprights by inserting button head into channel.
- 2. Slide all lower uprights over base uprights, then tighten knob of upright to secure, using top as tightening tool.
- 3. Slide uprights over lower uprights, then tighten knob of upright to secure, using top as tightening tool.
- 4. Attach crossbars and uprights for Plasma TV location. Tighten knob of upright to secure, using top as tightening tool.
- 5. Attach all upper crossbars to upper uprights by inserting button head into channel.
- 6. Slide cone tops over upper uprights, then tighten cone top to secure.
- 7. See additional pages for accessory instructions.

NOTE: Although model shown below may differ from your model, assembly instructions remain the same.

Applicable Products:



