
Visual Merchandising (Creo[™])

NOTE: Most upright components must be installed before completing unit assembly. End user determines component location.

1. Slide puck glide screws down the upright channel (fig. A).

2. Tighten pucks to hold frame firmly in place (fig. B).

NOTE: Frame shown below may look different from your model, but assembly instructions remain the same.

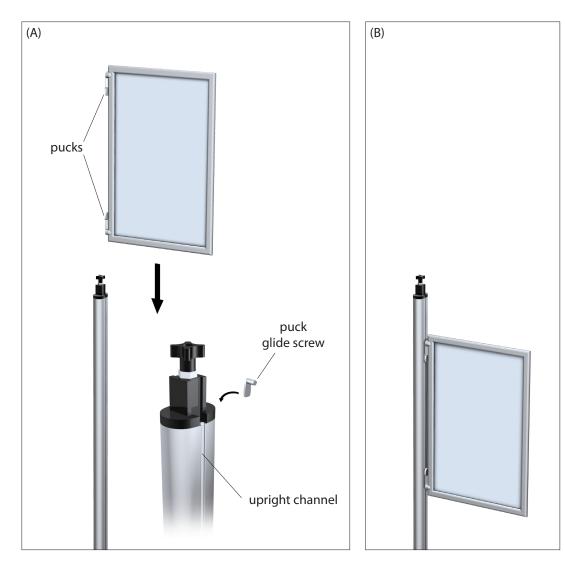

Applicable Products: Frames (CRPX-D)