





Visual Merchandising (Creo™)

Applicable Products:







Joiner (CRC5)
Joiner (CRC6)
Joiner (CRC9)
Joiner (CRCA)

**NOTE: Most upright components must be installed before completing unit assembly.
End user determines component location.**

- BASE**
1. Press crossbars into base upright channels (fig. A & fig. B).
 2. Press joiner into base upright channel (fig. C & fig. D).
 3. Slide uprights over base uprights and tighten upright knob to secure (fig. E & fig. F).
- TOP**
1. Press crossbars into upright channels (fig. G & fig. H).
 2. Press joiner into upright channel (fig. I & fig. J).
 3. Slide cone over upright and screw cone onto upright to secure unit (fig. K & fig. L).

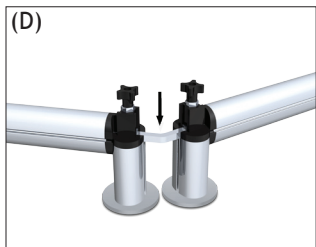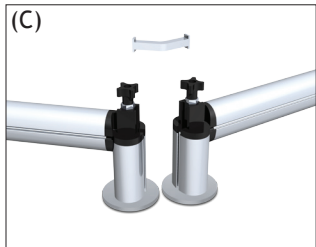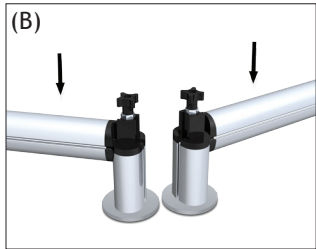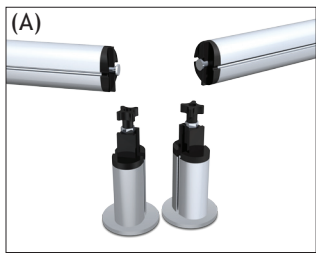

Base

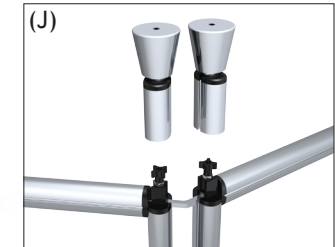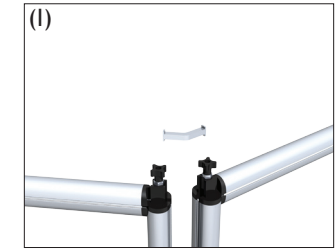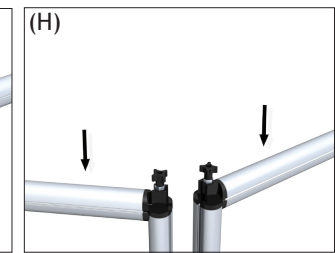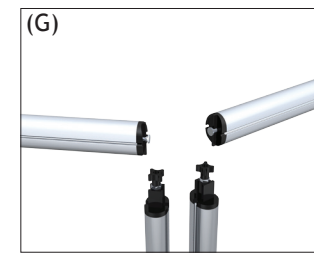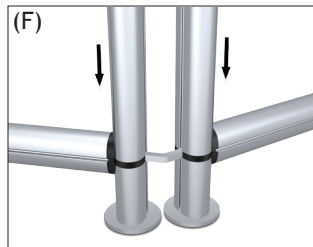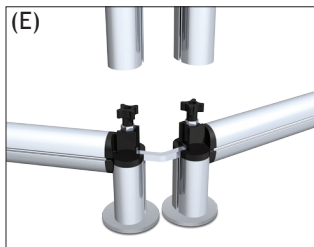

Top

