
Visual Merchandising (Creo™)

NOTE: Most upright components must be installed before completing unit assembly. End user determines component location.

- 1. Press bottom shelf crossbar into base upright channel (fig. A).
- 2. Slide uprights over base uprights and tighten knob, using cone top as a tightening tool (fig. B).
- 3. For panel gripper assembly, please see Panel Grippers (CRPG) Instruction Sheet.
- 4. Press top shelf crossbar into upright channel (fig. C).
- 5. Slide cone over upright and tighten cone to secure (fig. D).
- 6. Align shelf with cone holes (fig. E) and screw pucks over shelf to secure unit (fig. F).

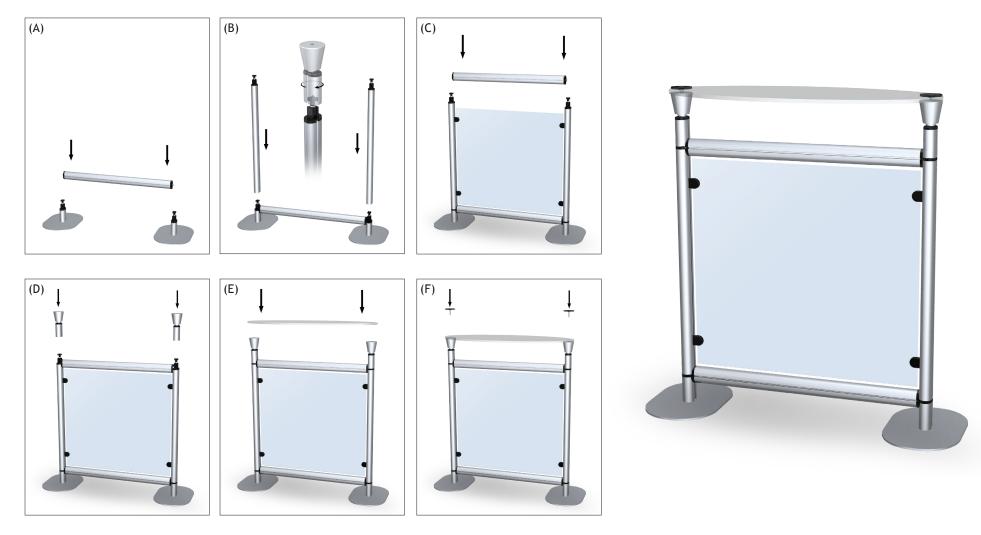

Podium (CRPK1-PG)