Visual Merchandising (Creo™)


NOTE: Most upright components must be installed before completing unit assembly. End user determines component location.


1. Insert knob rest glides into upright channels. Slide knob rests to desired location (fig. A).

- 2. Hook shelf brackets over knob rests and tighten knobs (fig. B).
- 3. Align notched sections of shelf with notched sections of shelf brackets to complete assembly (fig. C).





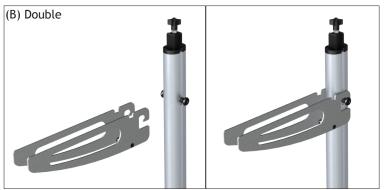

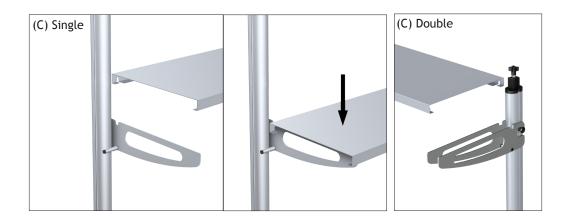

Applicable Products:

Regular Shelf (CRST) Single Bracket (CRSB) Double Bracket (CRDB)

