
Visual Merchandising (Creo™)

NOTE: Most upright components must be installed before completing unit assembly. End user determines component location.

Insert glides into upright channel (fig. A). **Repeat 2x.** Align holes of vitrine with both glides (fig. B). Screw puck heads onto glides (fig. C). Tighten pucks to secure vitrine. (fig. D).



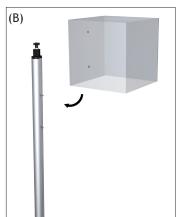





Applicable Products:

Vitrine (CRVTR)

