



Perfex Frame Structure™ - TRPX, SQPX, RCPX Series

1. Align frame with the mounted angle clip to the other frame with the slotted holes, making sure the the open slot on both frames match.
Screw both frames together using a screwdriver with the screws provided.
2. Insert graphic from top (not shown).

NOTE: Model shown below may differ from your model. Assembly instructions remain the same.

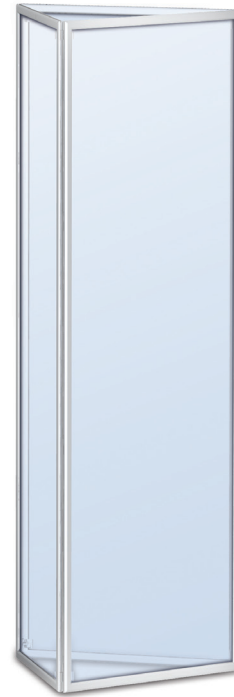

TRPX shown

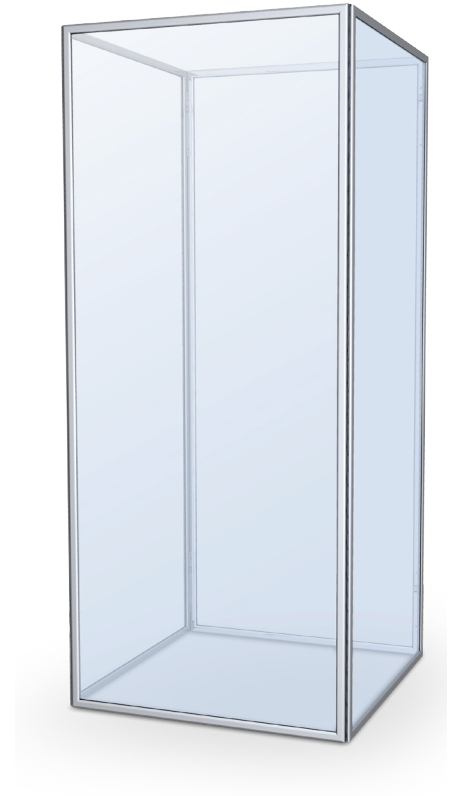

RCPX shown