


# Flair Perimeter Frame™ - FLR Series - Knocked Down

1. Install the bracket pairs onto the ends of two opposite sides of the frame. The plain bracket will be placed behind the bracket with the pre-mounted screws. The pre-mounted screws will face toward the back of the frame. Tighten the screws enough to keep the brackets in place, but do not full tighten. Insert the free end of the fasten brackets completely into the ends of the frame sides without brackets. Full tighten all the screws.
2. Install the first french cleat on the wall using the appropriate screws and anchors. *Note - larger frames may have more than one cleat for top and/or bottom.*
3. Insert the second french cleat into the lower back lip of the frame with the gap facing forward
4. Add your choice of Velcro or double-sided tape to the front face of the frame (not provided). Place the back lip of the frame onto the wall mounted french cleat clip. Mark the hole locations. Remove the frame and install the anchors. Then place the frame back on the wall.
5. Fasten the lower french cleat using the appropriate wall screws.
6. Add the graphic to the double sided tape. Use the notch at the corner of the frame to remove the graphic when needed.

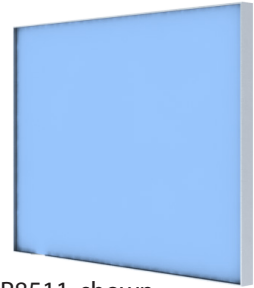

FLR8511 shown

