


Flair Perimeter Frame™ - FLR Series

1. Install the first french cleat on the wall using the appropriate screws and anchors. *Note - larger frames may have more than one cleat for top and/or bottom.*
2. Insert the second french cleat into the lower back lip of the frame with the gap facing forward
3. Add your choice of Velcro or double-sided tape to the front face of the frame (not provided). Place the back lip of the frame onto the wall mounted french cleat clip. Mark the hole locations. Remove the frame and install the anchors. Then place the frame back on the wall.
4. Fasten the lower french cleat using the appropriate wall screws.
5. Add the graphic to the double sided tape. Use the notch at the corner of the frame to remove the graphic when needed.

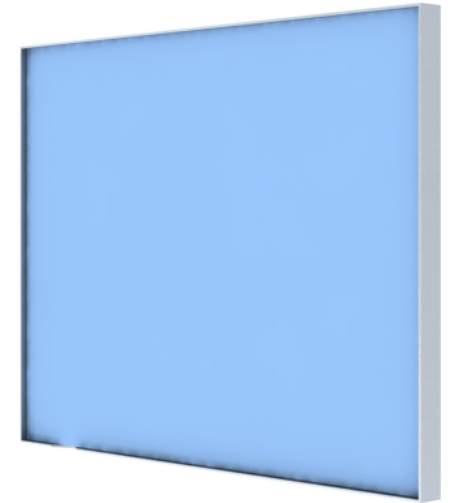

FLR8511 shown

