

Skyscraper Mount™ - SKTR Series (Triangle)


For the 96" units (SKTR8) or taller, the uprights are split in half. Each upper section will have to two pre-attached joining rods sticking out of the bottom.

- 1. IF UPRIGHT IS SPLIT IN HALF: Fully insert the rods of the upper section into the semi-circular holes inside the bottom upright. Fasten the upper section to the bottom section using the short hex screws provided. Attach one screw from the front face and one screw from the back face of each upright. Only tighten screws enough for screw to come to a stop with MINIMAL effort. OVERTIGHTENING MAY CAUSE INDENTING OF THE FACE OF THE LOWER UPRIGHT.
- 2. Attach two full uprights to each to each base using the flat head screws provided. Orient the uprights with the graphic slot facing away from each other and the holes along the uprights facing outward.

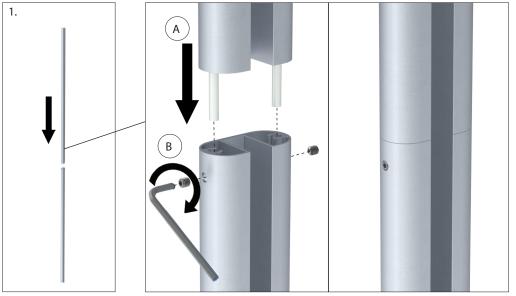


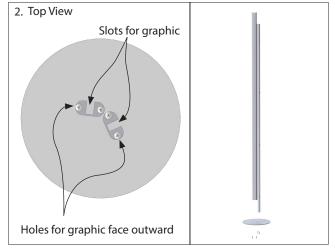



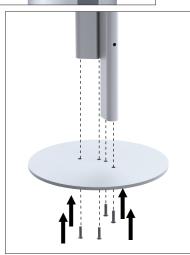




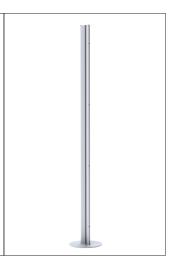

Skyscraper Mount[™] - SKTR Series (Triangle)

- 3. Place graphic fully in the upright channel.
- 4. Fasten the first graphic into place using headless set screws provided.
- 5. Attach second upright to graphic and fasten using the headless set screws provided.
- 6. Repeat step 3 and 4 for the next graphic.
- 7. Repeat step 3 and 4 for the last graphic.



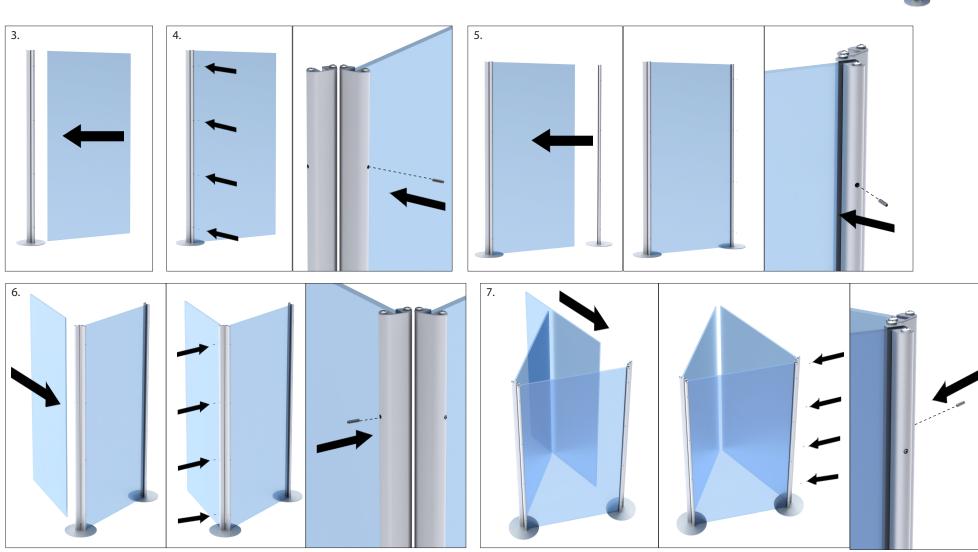

Skyscraper Mount™ - SKTR Series (Triangle)

- 8. Attach the final upright assembly to the free ends of the adjacent graphics. If needed, gently spread the graphics in order to fit the upright completely onto the ends of the graphics.
- 9. Fasten the graphics using the headless set screws provided.

