

Trapeze Wall Mount

- 1. Screw together top and bottom crossbar sections (fig. A).
- 2. Determine crossbar width. Align brackets on wall and mount using Philips head screws provided. If mounting to drywall or hollow walls, predrill 3/16" holes and insert molly anchors before mounting bracket to wall (fig. B).
- 3. Temporarily mount crossbar to end brackets to determine center bracket position (fig. C).
- 4. Slide center bracket(s) underneath crossbar until it rests on the hook (fig. D).
- 5. Mount center bracket(s) to wall using Philips head screws provided (fig. E).
- 6 Remove crossbar and slide top and bottom crossbars into pole pockets located on the graphic (fig. F).
- 7. Reinstall top crossbar to complete installation.



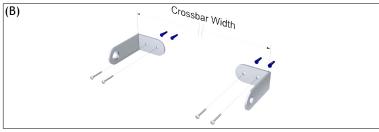




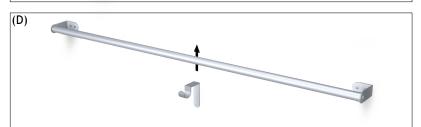





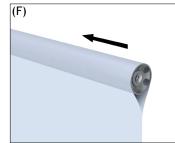

Applicable Products:

BPSB1 (One Section) BPMB1 (Two Section) BPMB2 (Three Section) BPMB3 (Four Section)