



Foot Operated Gallon Stand - HSG-FOOT

- 1. The bottom of the base has bumpers pre-installed. This bottom side faces the floor. The top end of the upright has an end cap. Face the foot pedal on the upright towards the center of the base and attach the bottom end of the upright to the base using the flat head screws provided. It is normal for the screws to protrude slightly once fully tightened.
- 2. The sanitizer bottle holder is in three parts. First, place the horizontal plate that has no bend on top of the bend of the vertical plate. Use the short round head screws to attach the plates to together by inserting the screws from the underside of the holes on the lip into the threaded holes of the horizontal plate. Tighten fully.
- 3. Then place the upright in between the newly assembled plates and the rear bracket with the knob, knob facing out. Take the Velcro out so it is NOT trapped between the upright and the bracket. Use the small round head screws to attach the holder to the rear bracket. The screws will be inserted from the front. The Velcro will go around the upright. Tighten the knob on the rear bracket to secure the position of the holder.
- 4. Place the hand sanitizer bottle on the plate, and loop the Velcro ® Brand Fastener through the slots in the back plate, around the bottle, and across the upright so that the Velcro connects to where it started in the back. If the Velcro is longer than desired it can be trimmed with scissors, though this may mean larger bottles can't be used in the future.
- 5. An optional securing cable may be placed through the handle of the bottle (if one exists), with the two cable ends passing through the hole on the vertical plate, and a padlock can join the cable ends.
- 6. Loosen the knob to raise the container. Attempt to dispense sanitizer by depressing the foot pedal. If too much liquid is dispensed, lower the bottle farther from the top paddle and re-tighten knob. If too little liquid is dispensed, raise the bottle holder. Tighten the Velcro strap if needed.
- 7. Step on foot pedal to dispense hand sanitizer.

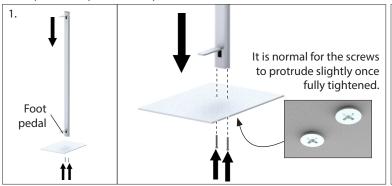


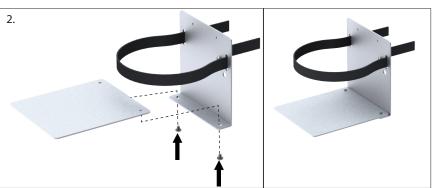

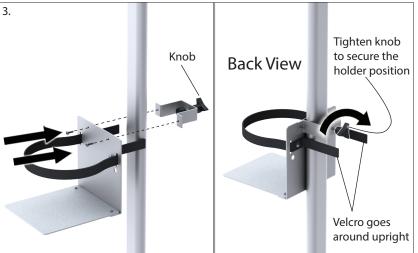

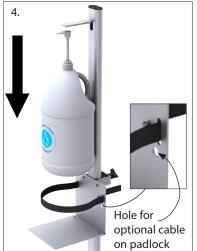



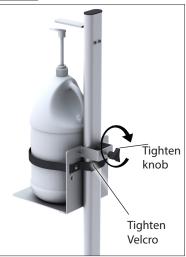

Foot pedal